


40x40 **DIRECT**

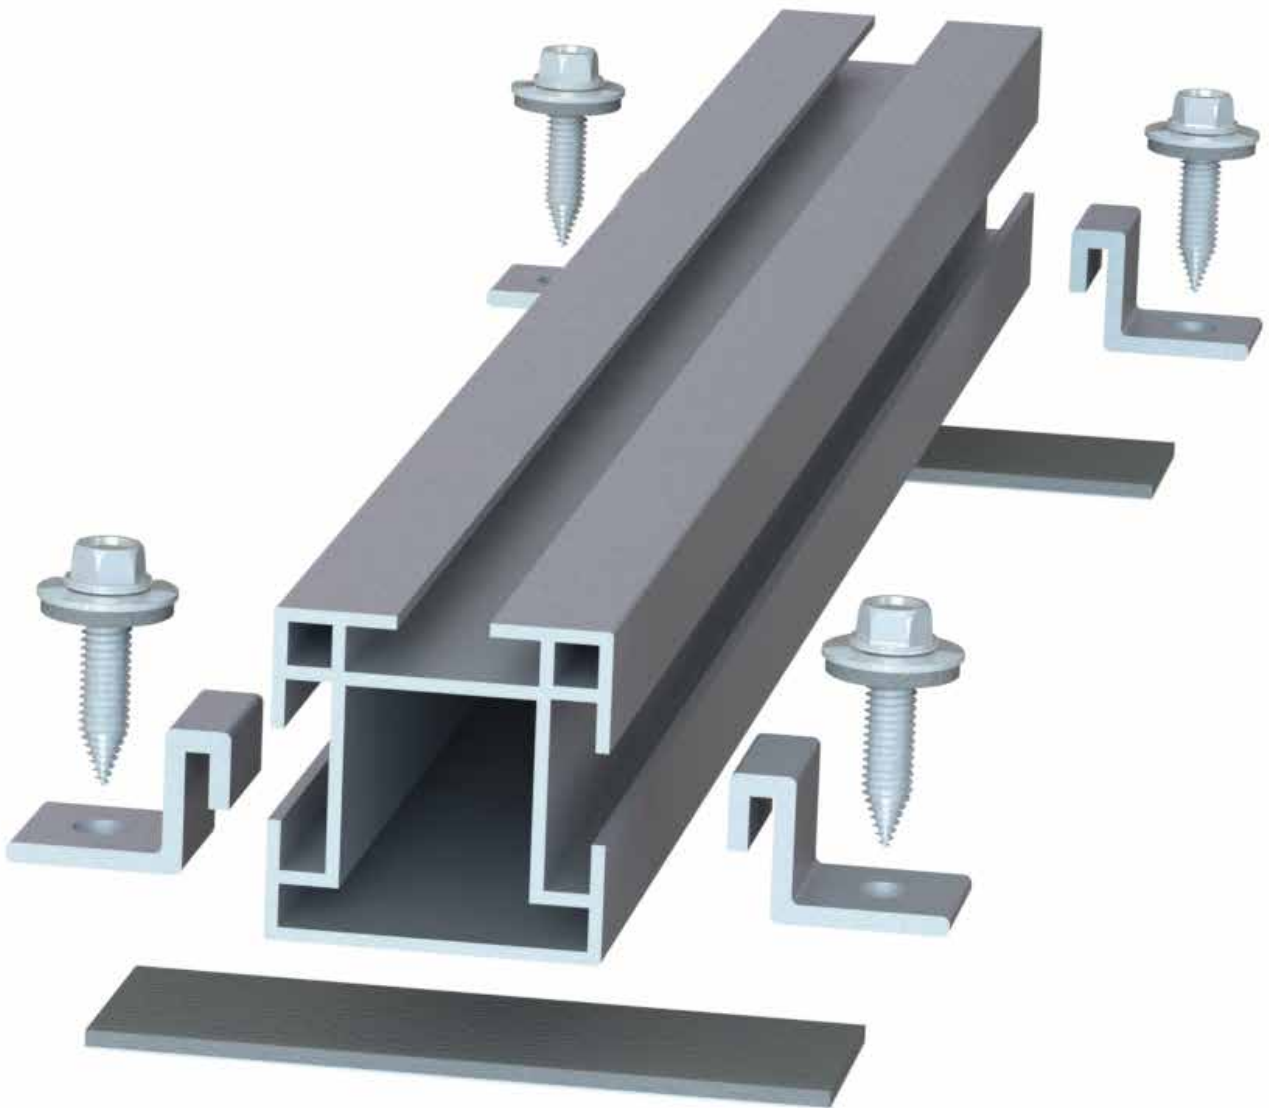

R3 Bourton Industrial Park, Bourton on the Water, Glos, GL54 2HQ, UK

Tel: +44 1451 824 312

Email: info@sunfixings.co.uk

WWW.SUNFIXINGS.CO.UK

V042017


2

Applying the EPDM Pads

Tools & Items Required



Layout

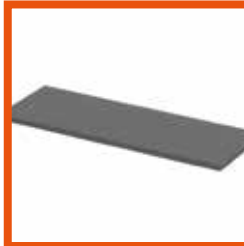

EPDM Pad

Use the Layout to confirm the positions of fixings.

Clean and dry the trapezoidal crowns so that they are free of any dirt or grease.


Peel off the backing. Apply onto the trapezoidal crown.



3

Position the Mounting Rail

Tools & Items Required

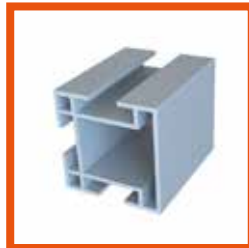


Mounting Rail



4

Fitting the Rail Clips



Tools & Items Required

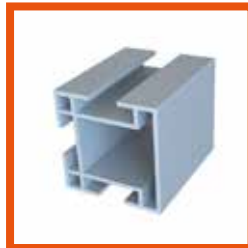

Mounting Rail



Rail Clip

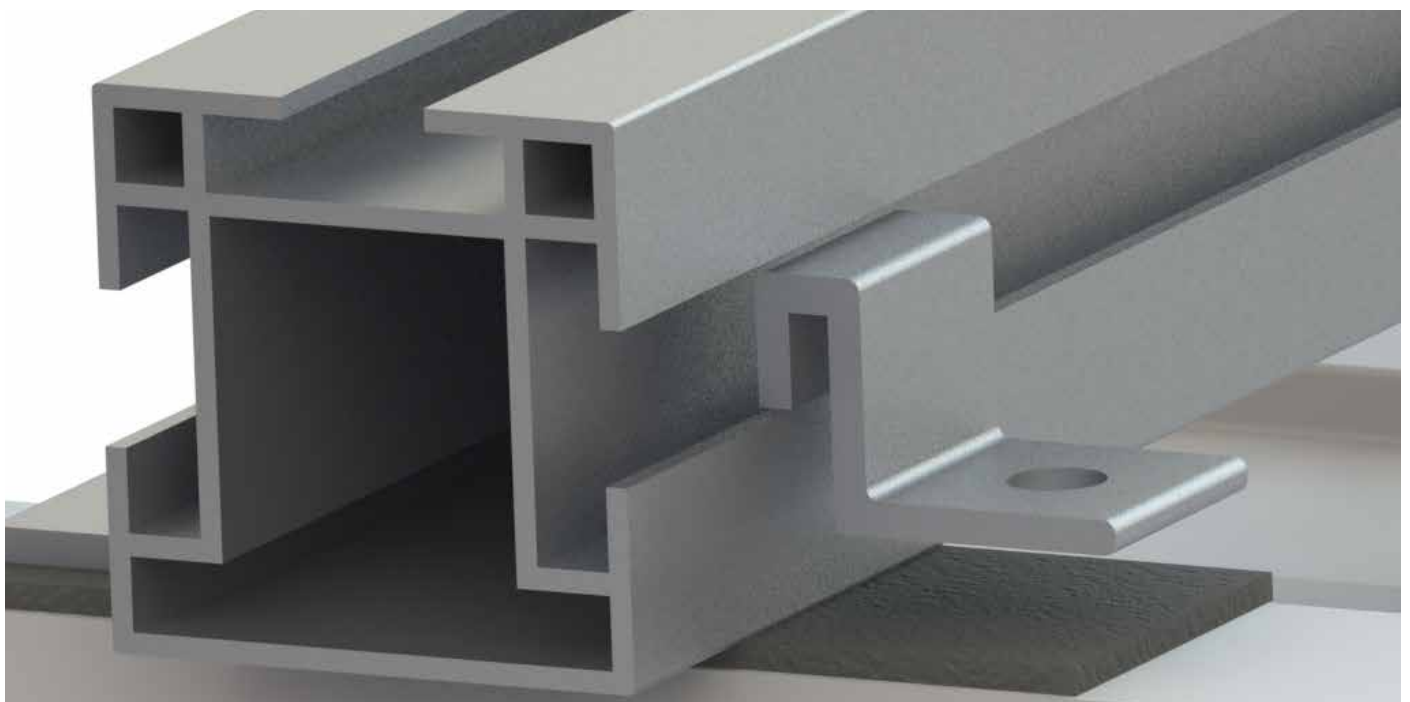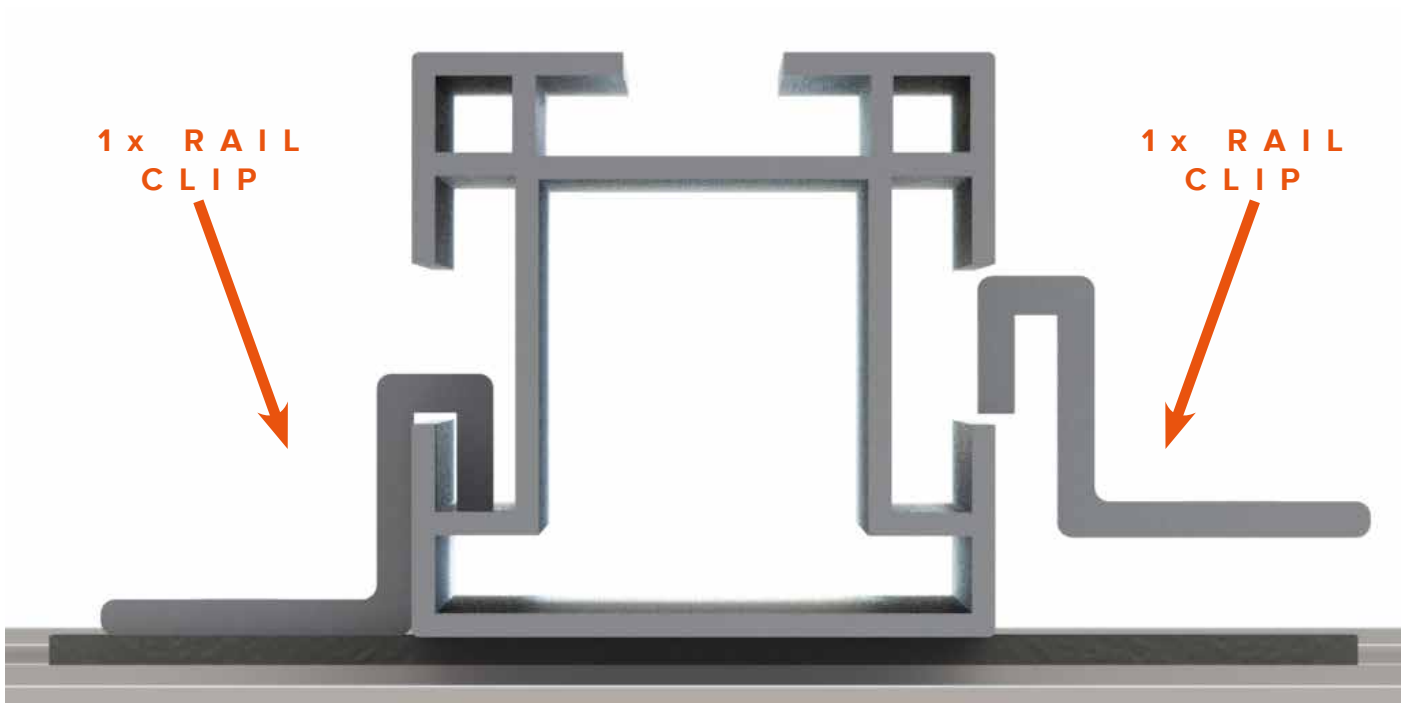

5

Fitting the Self Drilling Screws

Tools & Items Required



8mm Hex
Socket Driver



Battery Drill
(NOT impactor)



Self Drilling
Screw



Rail Clip

2x Self Drilling Screws = 1 fixing point on the layout.

DO NOT overtighten or squash the washer.



**NO
IMPACTORS**

