



IN ROOF



R3 Bourton Industrial Park, Bourton on the Water, Glos, GL54 2HQ, UK

Tel: +44 1451 824 312


Email: info@sunfixings.co.uk

WWW.SUNFIXINGS.CO.UK

V072017

2

Measure the array & remove necessary roofing tiles

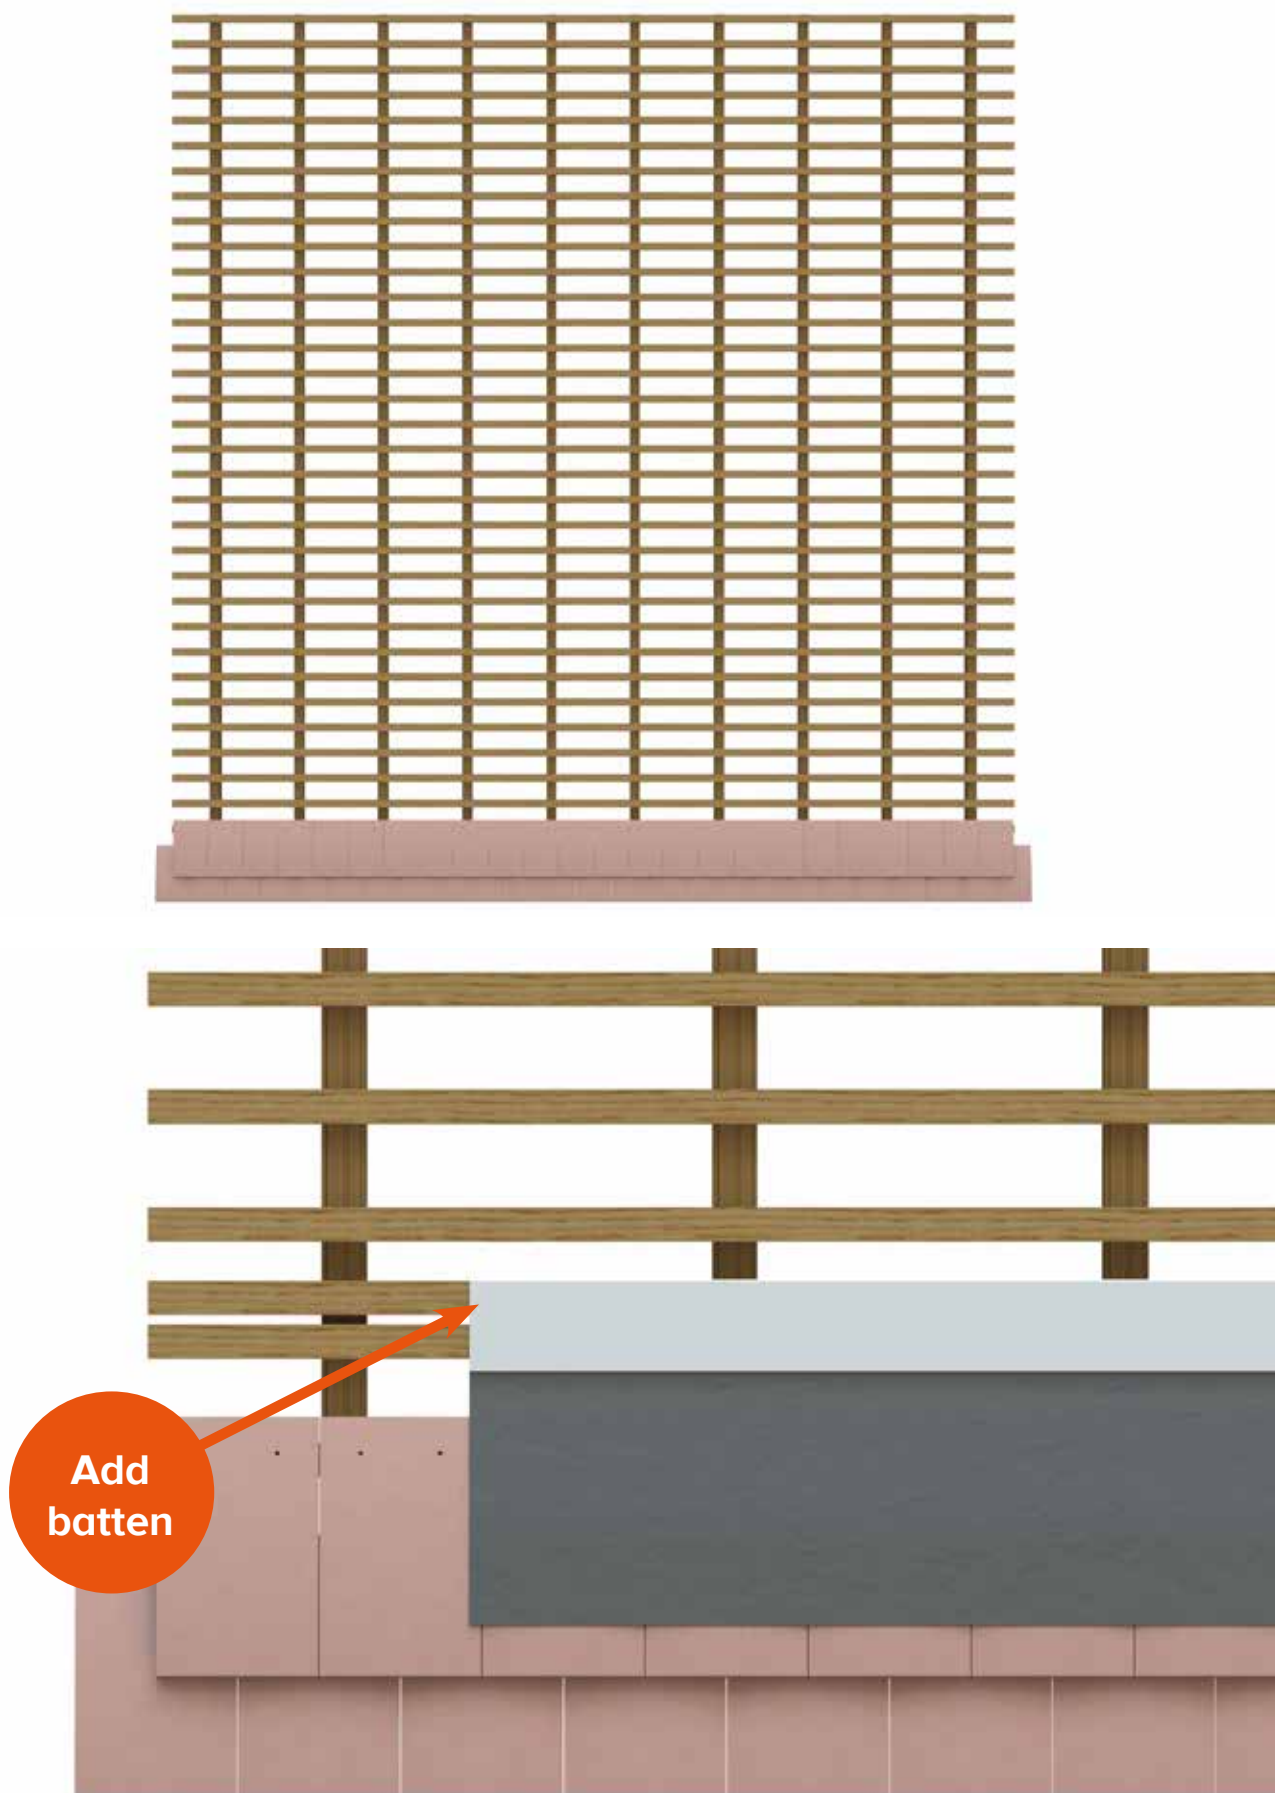

3

Fit the flashing to the bottom of the array

Tools & Items Required







Layout



Flex 450mm
(bottom)

Flex to sit lower than roofing tile.

Peel off the backing of the Flex and stick over battens & roofing tile.

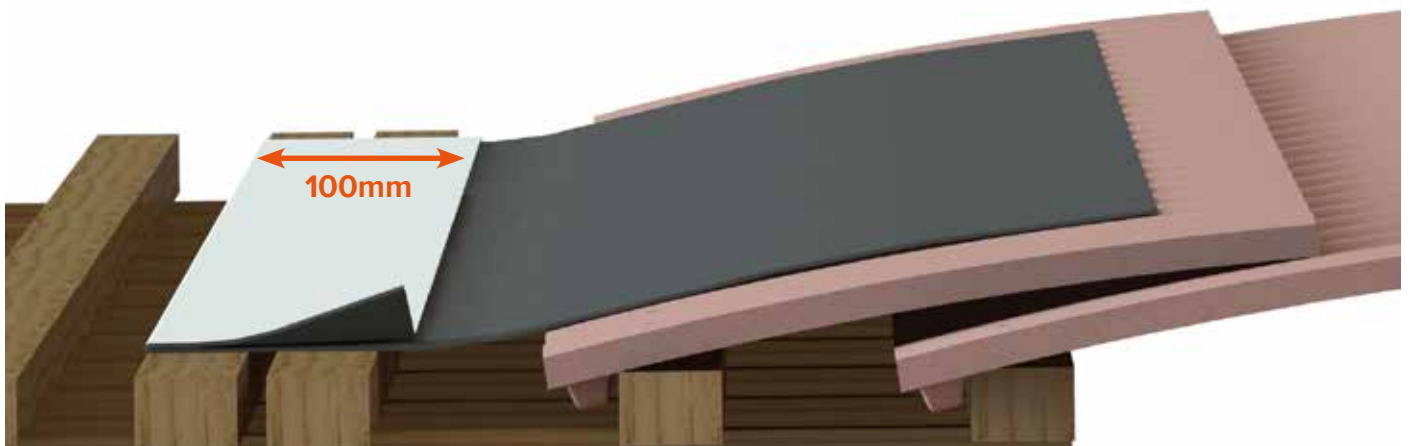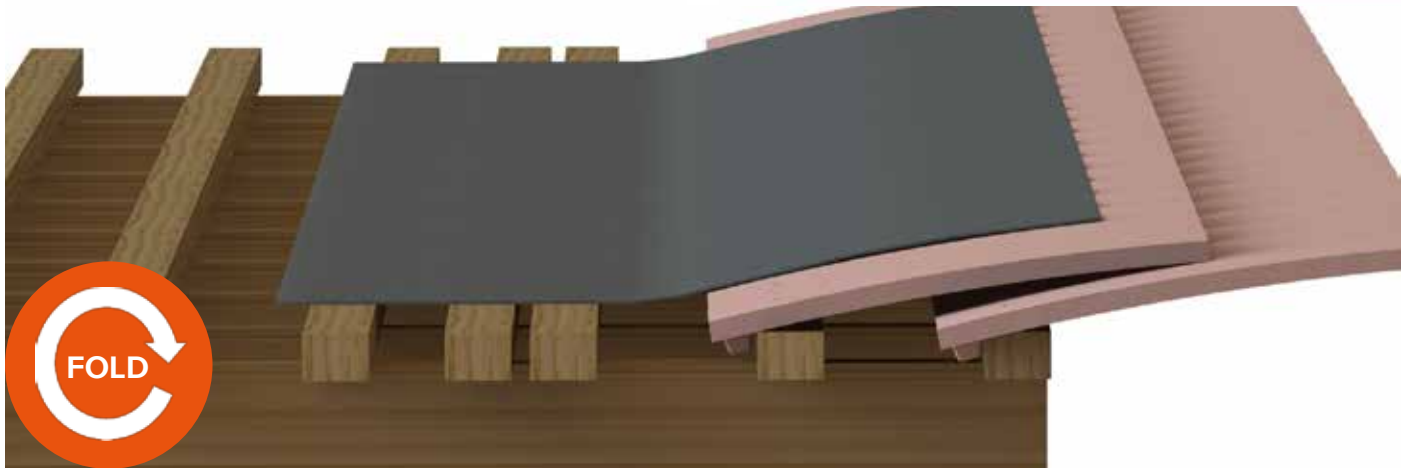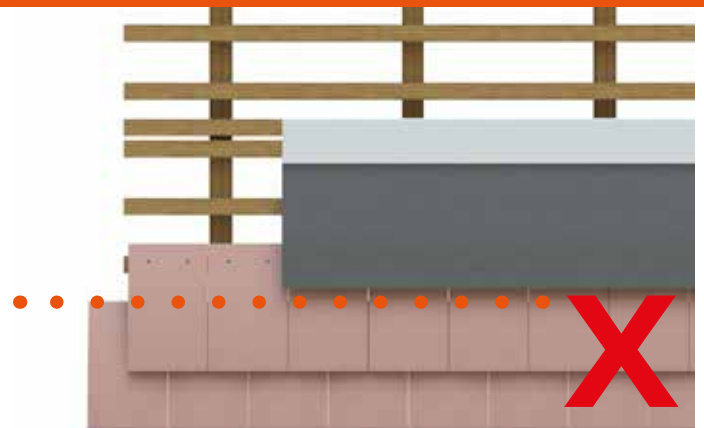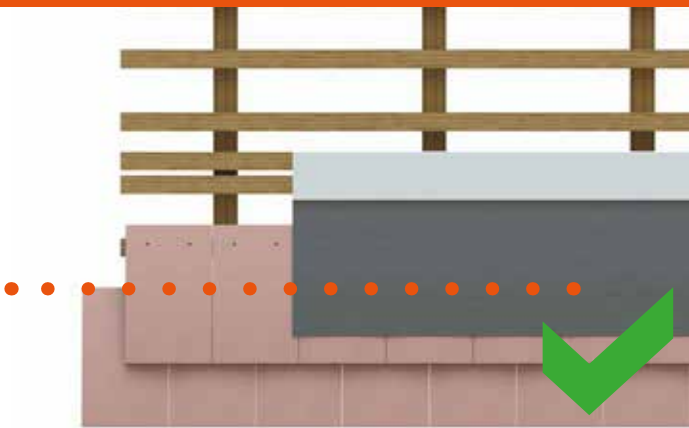


4

Position the Trapezoidal Sheets



Tools & Items Required





Layout

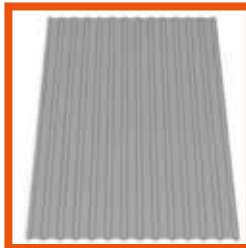

Trapezoidal Sheet

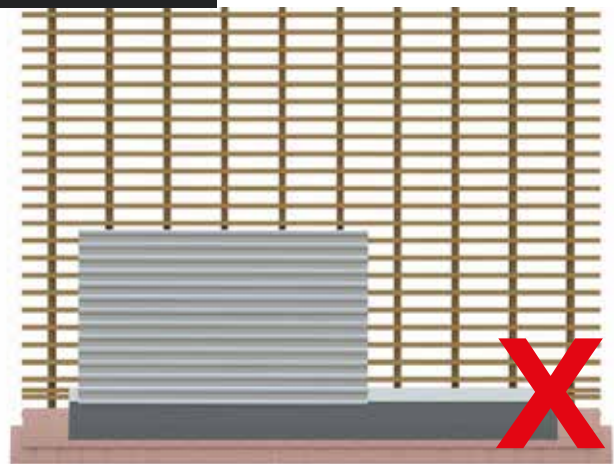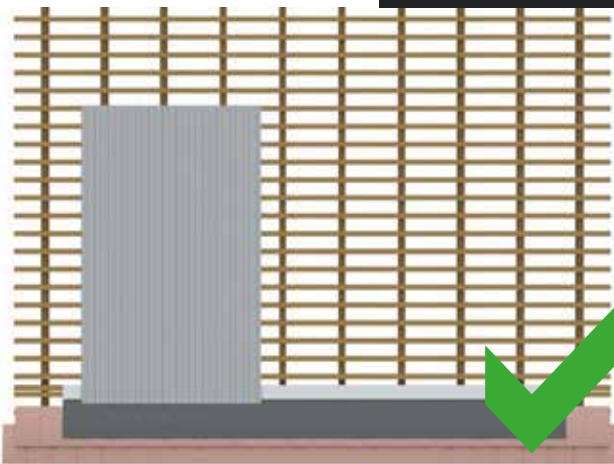

Use layout for overlap dimension

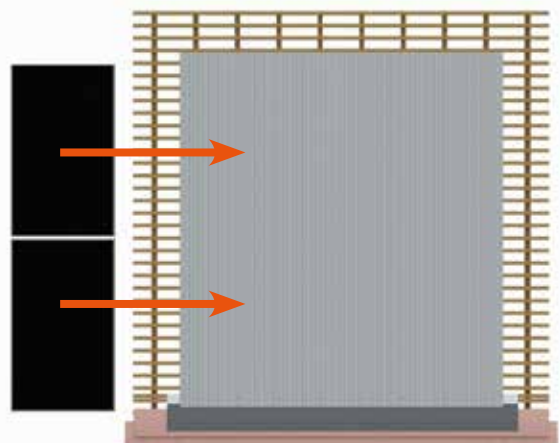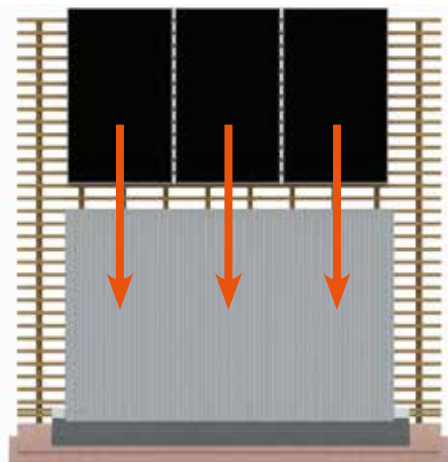

5

Fixing the Trapezoidal Sheets into the rafters


Tools & Items Required



Battery Drill
(NOT Impactor)



8mm Hex
Socket Driver

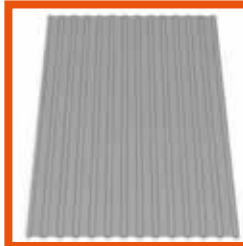


Trapezoidal
Sheet




Wood Screw

Into
rafters

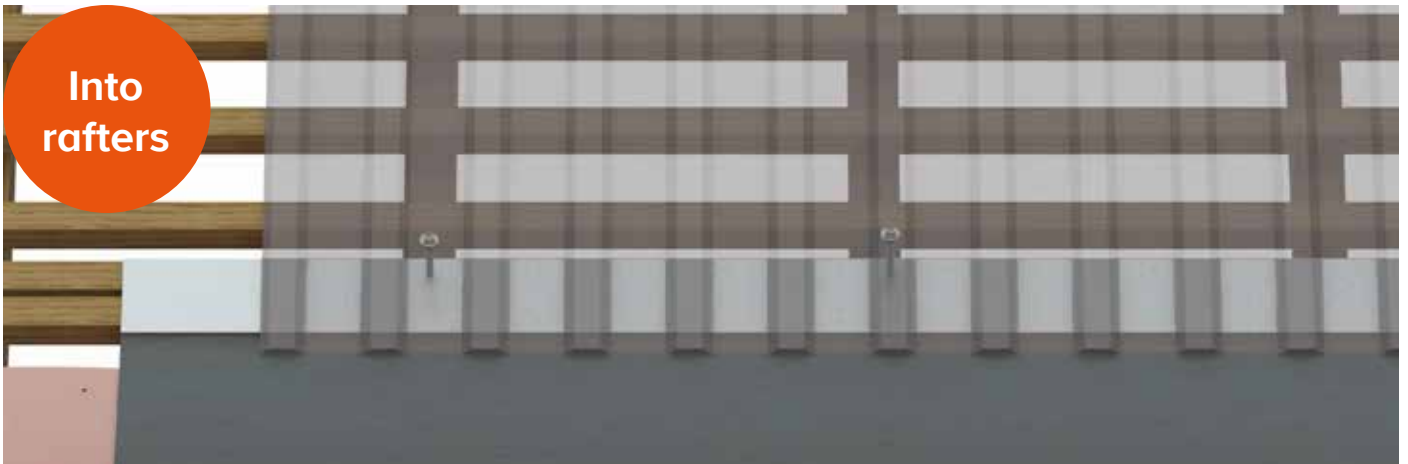

12 wood
screws per
trapezoidal
sheet

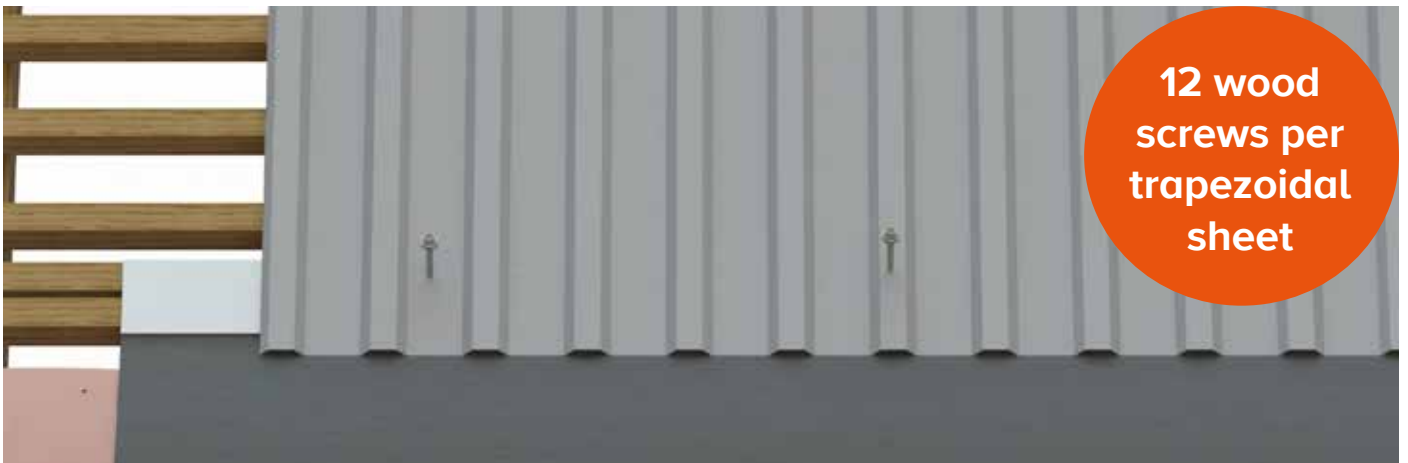




6

Fit the flashing to the sides of the array

Tools & Items Required



Peel off the backing of the Flex and stick over the 1st trapezoidal crown.

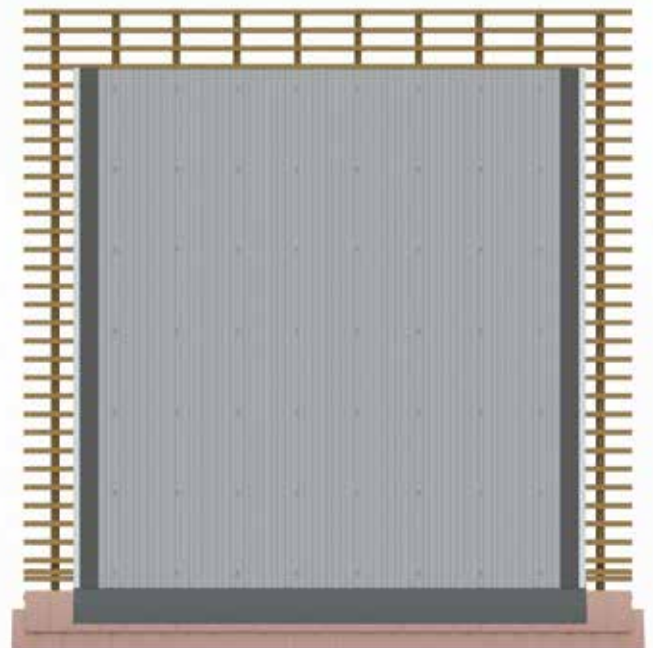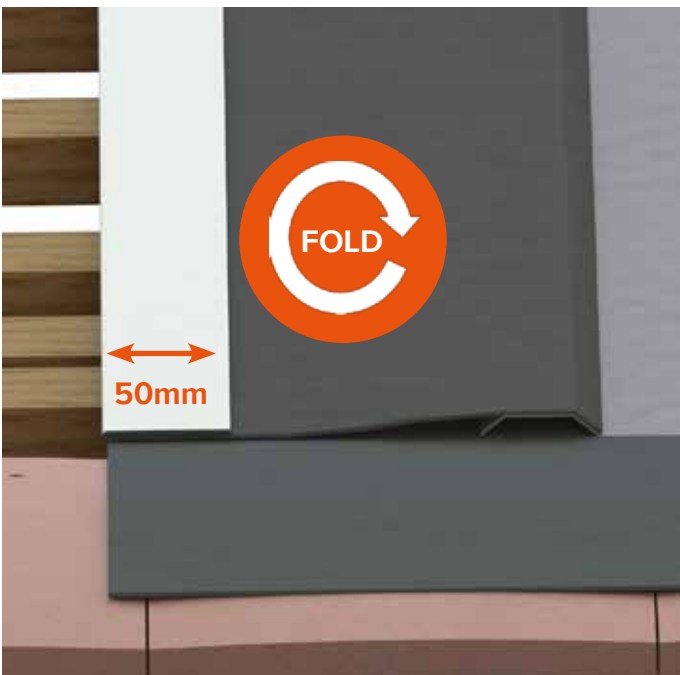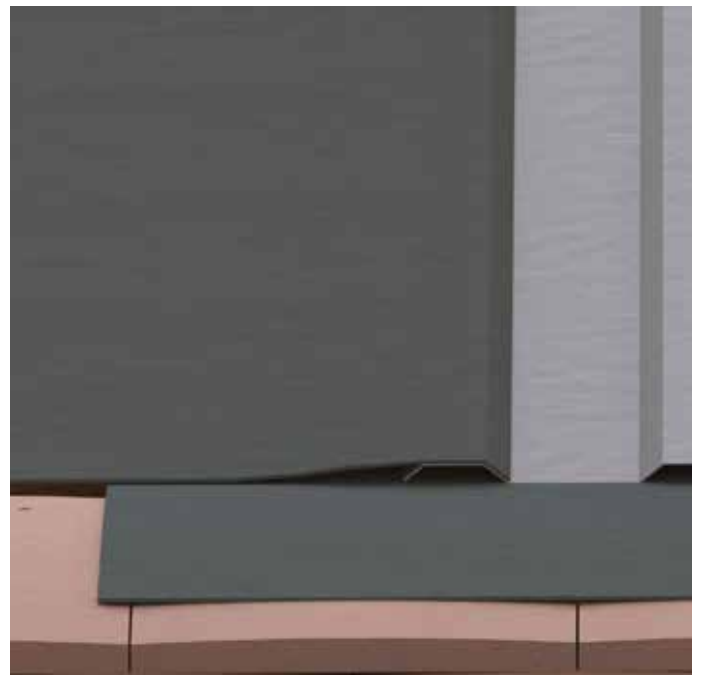

7

Fit the Expansion Tape to the top of the array

Tools & Items Required



Stick to the top of the array across the trapezoidal sheets.



Fit the Mounting Rails to the Trapezoidal Sheets.

Tools & Items Required



Battery Drill
(NOT Impactor)



8mm Hex
Socket Driver



Self Drilling
Screw



Mounting Rail

4x Self Drilling Screws for each Mounting Rail.

DO NOT overtighten or squash the washer.

